

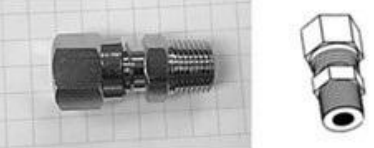
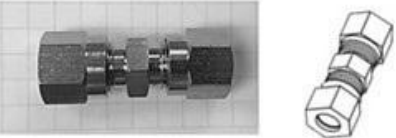

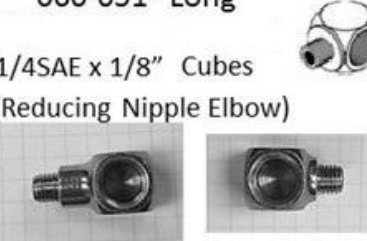
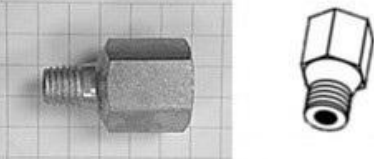





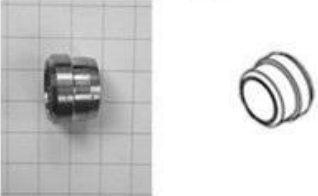

**Common Fittings** – May be purchased as a kit or individual quantities

# S.E.T.I. Parts Kit

<p><b>060-0650</b> 3 pc. 5/16" furrel for main line fittings (Compression Ring)</p> 	<p><b>060-052- Short</b> 3 pc. each <b>060-052- Long</b> 1/8" x 1/8" cube (Reducing Nipple Elbow)</p> 	<p><b>060-046</b> 5 pc. Secondary straight (Male stud 1/8" x 3/16")</p> 	<p><b>060-040</b> 5 pc. Secondary Connector (Coupling Straight 3/16" x 3/16")</p> 
<p><b>060-0630</b> 8 pc. 3/16" furrel for 046/049 (Compression Ring)</p> 	<p><b>060-051- Short</b> 3 pc. each <b>060-051- Long</b> 1/4SAE x 1/8" Cubes (Reducing Nipple Elbow)</p> 	<p><b>060-042</b> 3 pc. Straight Cube (Reducing Nipple-Straight 1/4SAE x 1/8")</p> 	<p><b>060-037</b> 2 pc. Mainline Elbow (90° Elbow Connector 1/4" x 5/16")</p> 
<p><b>060-061</b> 8 pc. Insert 5/16" – mainline</p> 	<p><b>060-049</b> 5 pc. secondary line elbow (90° Elbow Connector 1/8" x 3/16")</p> 	<p><b>060-041</b> 2 pc. Mainline connector (Coupling Straight 5/16")</p> 	<p><b>060-032</b> 2 pc. Mainline straight (Male stud Coupling 1/4" x 5/16")</p> 
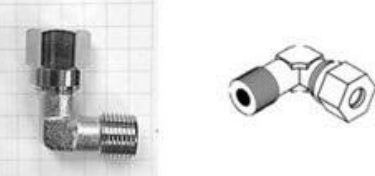
## SETI Exclusive Refilling Kit




The SETI hand pump kit includes a convenient:

- Male quick connector for the hose to the pail lid to eliminate air before filling the pump
- Female quick connect for the hose to the Ecostar pump
- Boot to prevent plastic pail debris from entering the system, and
- A heavy-duty hand pump.

**Assembly instructions and directions for use can be found under 'Filling the Reservoir' on the Care and Maintenance page**

**NEVER force the hand pump if there is resistance**

**Meters** – the size of the meter is determined by the number of rings between the hex body and the cylindrical top, not the stamp on the meter.

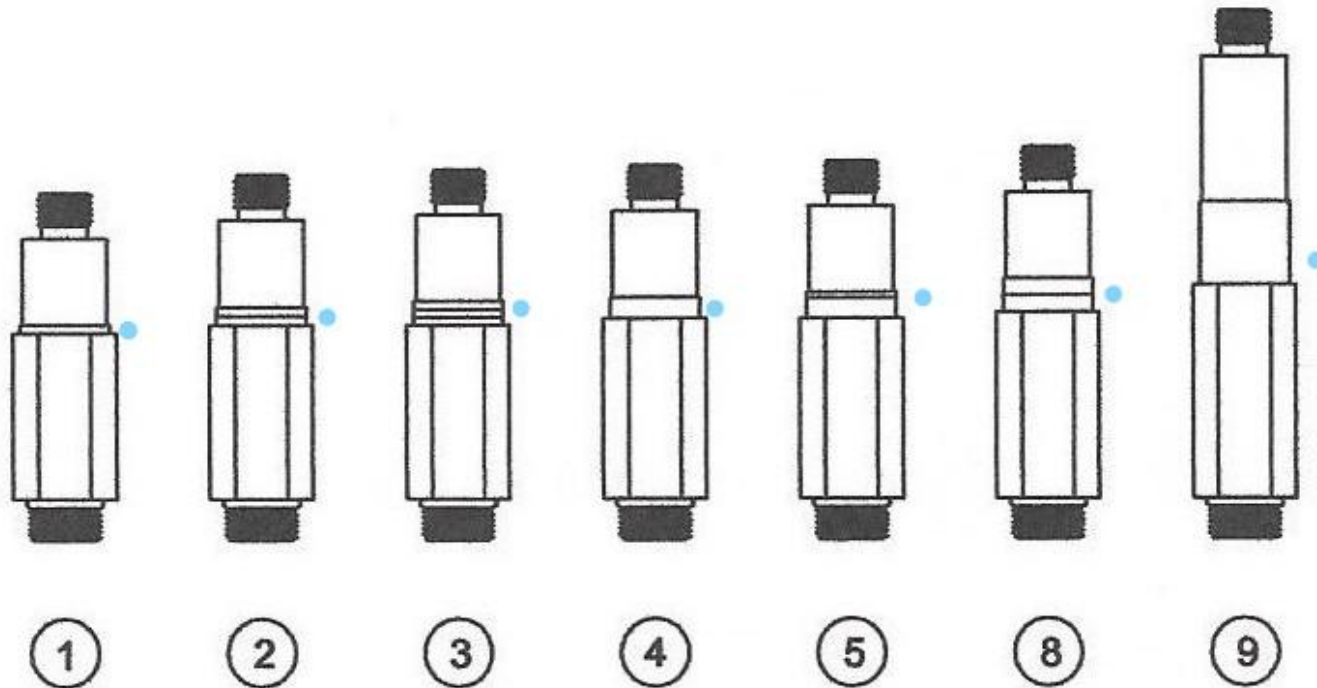

(from Ecostar Manual, Ed. 12/12)

**Meter Sizes 1-9**


The engravement or stamping on the meter is a factory date code and part number:



070 - 040 - 0070 = #1 meter  
 070 - 040 - 0080 = #2 meter  
 070 - 040 - 0090 = #3 meter  
 070 - 040 - 0100 = #4 meter

070 - 040 - 0110 = #5 meter  
 070 - 040 - 0140 = #8 meter  
 070 - 040 - 0250 = #9 meter

**Grease Pump Parts** – see “Component Operating Principle – Grease Pump” for larger format

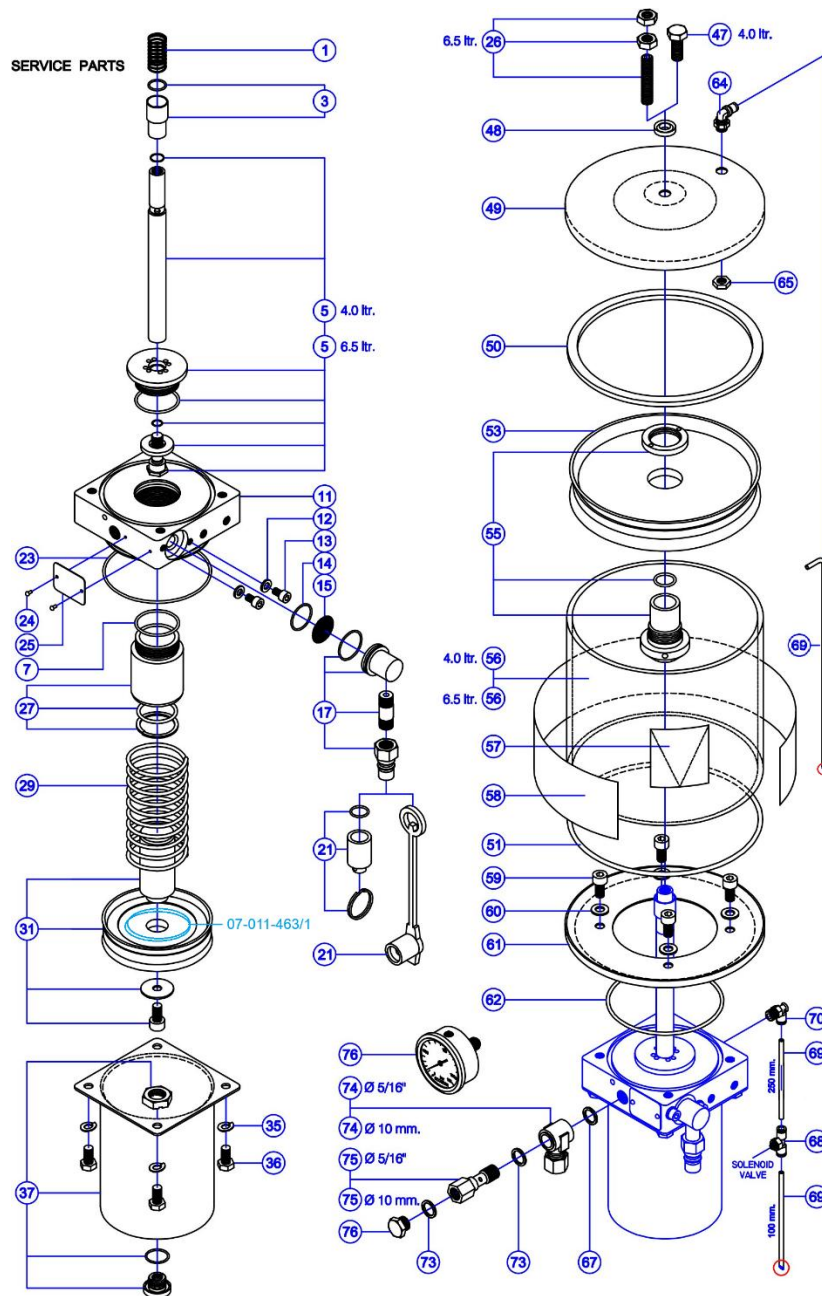

Parts list for grease pump

Item no.	Code no.	Description
1	07-010-558	Spring overfill valve
3	07-010-561S	Overfill valve (kit)
5	07-010-5540	Column + foot valve holder 4 l
	07-010-5730	Column + foot valve holder 6.5 l
7	07-010-4660	O-ring
11	07-010-548	Pump house
12	16-041-6 A2	Ring (2x)
13	16-013-6 10 A2	Bolt (2x)
14	07-010-435	O-ring
15	07-010-417	Gauze filter
17	07-010-5560	Filling-filter locking ring (kit)
21	07-010-093/01	Dust hood aluminium (kit) Dust hood rubber
	07-010-0931	O-ring
23	07-010-543	O-ring
24	07-010-478	Pin (2x)
25	07-010-743	Type plate
26	07-010-576	Threaded end 6.5 ltr. + nut (2x)
	16-021-10 A2	nut (2x)
27	07-010-5300	Piston tube (kit)
29	07-011-463	Plunger spring
31	07-011-4130	Piston (kit) (011-463/1 centering ring)
35	16-043-8 A2	Toothed washer (4x)
36	07-010-427	Bolt (4x)
37	07-549S	Cylinder tube (kit)
47	07-010-571	Bolt 4ltr.
48	07-010-434	Dubo ring
49	07-0120-555	Top cover
50	07-010-546	Cover ring
51	07-010-420	O-ring
53	07-010-457	Support piston
55	07-010-5570	Piston guide (kit)
56	07-010-401	Grease holder 4 l
	07-010-402	Grease holder 6.5 l
57	07-010-3400	Level sticker reservoir Ecostar
58	07-010-340	grease pump sticker
59	07-010-464	Recessed-head screw (4x)
60	07-010-572	Ring (4x)
61	07-010-552	Bottom cover
62	07-010-545	O-ring
64	07-010-5620	Overflow port
65	07-010-5630	Nut
67	07-010-159	Seal washer aluminium
68	07-060-9910	De-aeration coupling T (on Solenoid)
69	07-010-028	De-aeration tubing 25cm 4 l
		De-aeration tubing 36cm 6.5 l
		De-aeration tubing 10/15/25cm
		De-aeration elbow
70	07-080-049	Solenoid valve
73	07-010-1590	Seal washer copper (2x) Banjo housing 5/16" / 8mm Banjo housing 10mm
74	07-010-208	07-060-151
75	07-010-207	Banjo nipple 5/16" / 8mm Banjo nipple 10mm
	07-010-243	100 mm
	07-060-209	Collar plug
76	07-010-107	Pressure gauge 0-160 bar

**Contact SETI at 905-878-7161 For Parts Not Listed above.**